



# THERMOCOUPLE TOLERANCES

## S (PtRh10 - Pt); R (PtRh13 - Pt); B (PtRh30 - PtRh6)

A

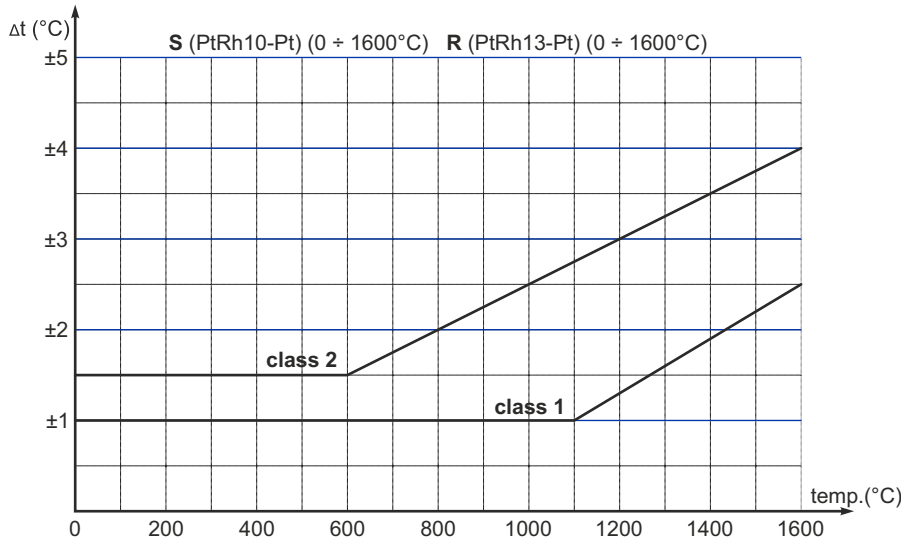


TABLE 4 as per PN-EN 60584

tolerance class	temperature range	tolerance (°C)
1	0 ÷ 1100°C	± 1
	1100 ÷ 1600°C	± (1+0,003(t-1100))
2	0 ÷ 600°C	± 1,5
	600 ÷ 1600°C	± 0,0025 (t)

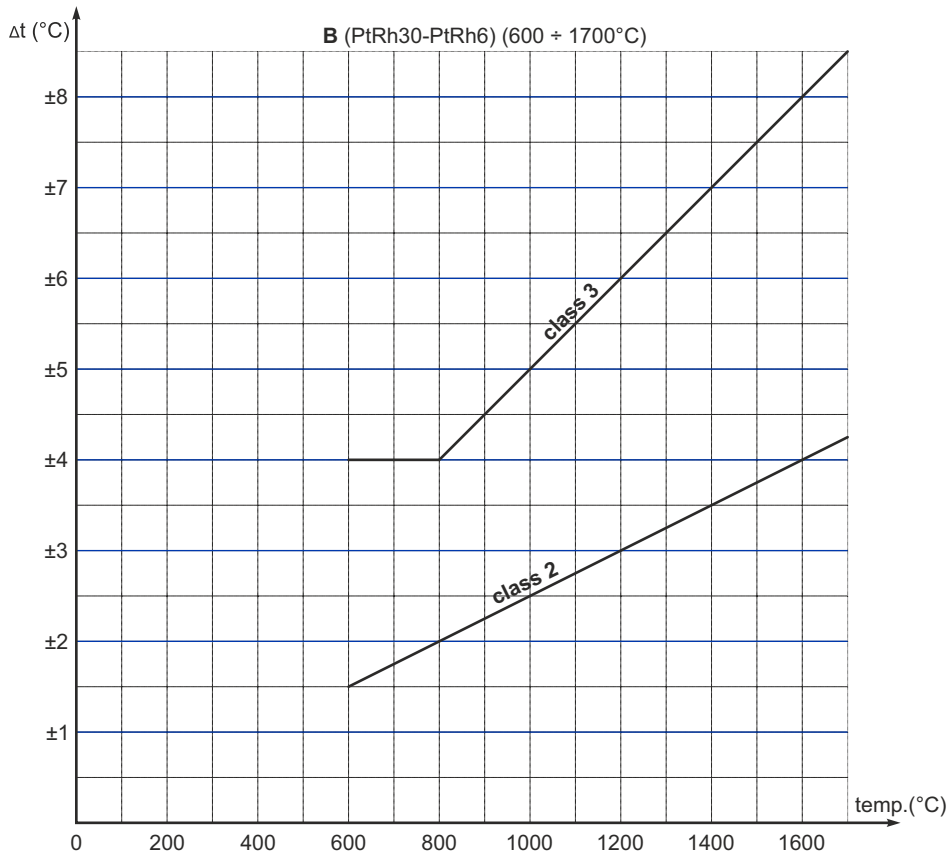


TABLE 4 as per PN-EN 60584

tolerance class	temperature range	tolerance (°C)
2	600 ÷ 1700°C	± 0,0025 (t)
3	600 ÷ 800°C	± 4
	800 ÷ 1700°C	± 0,005 (t)